



Black and Decker DustBuster 15.6V Battery Pack Replacement

This guide will allow help you replace the battery pack located inside your DustBuster 15.6 V cordless vacuum.

Written By: Jordon Borges



INTRODUCTION

Overtime the battery pack located in your vacuum will hold less charge and might not charge at all. This can be remedied by replacing the battery pack.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Battery Pack](#) (1)

Step 1 — Battery Pack



- Remove the six exterior 2 mm Phillips #0 screws securing the 2 halves of the white shell together.

Step 2




- Remove nozzle by pressing two blue buttons on the side of the nozzle

Step 3





- Remove the dustbin by pressing the blue button on the vacuum's handle and lift the bin from the vacuum.

Step 4

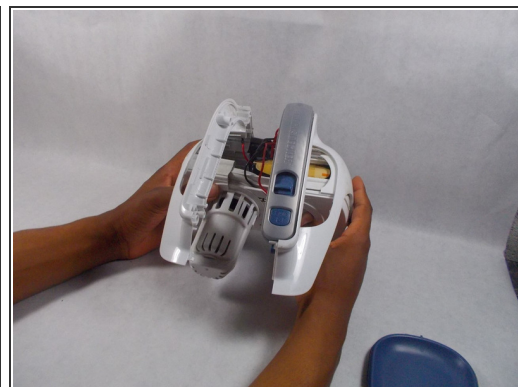



- Gently separate the two halves by pulling them apart, revealing the 14 cell battery pack behind the motor.

Step 5

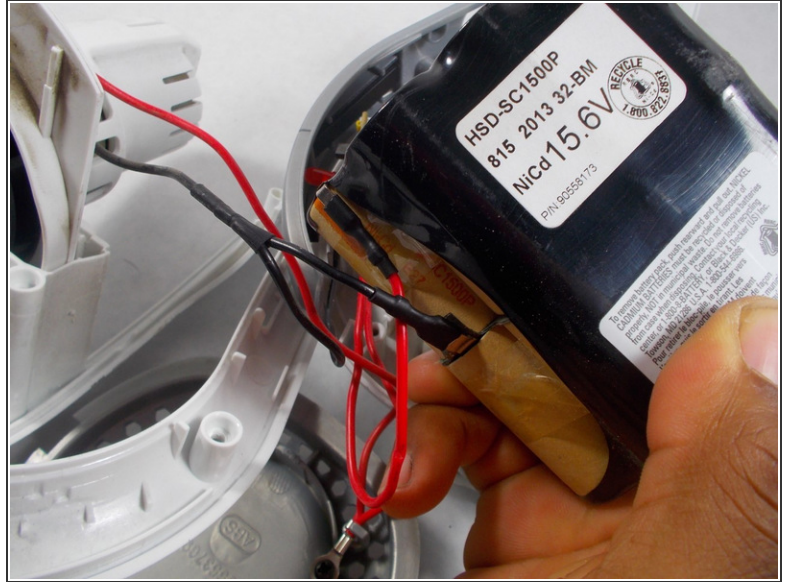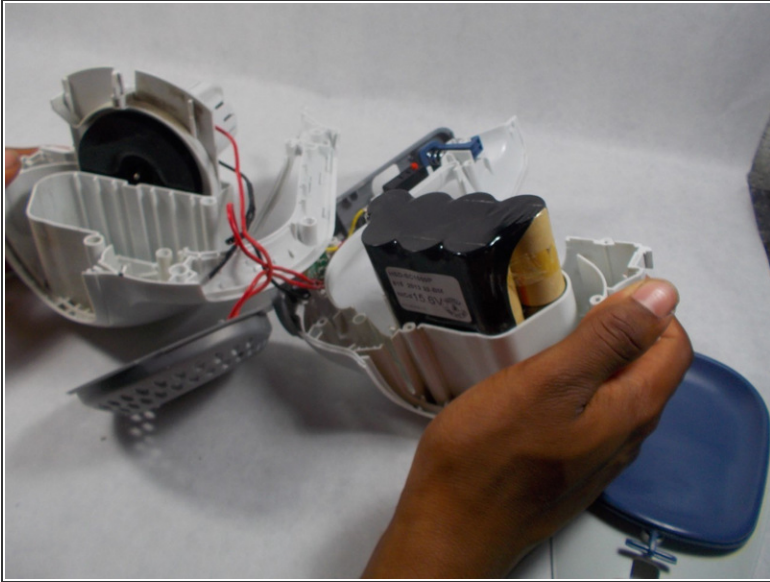

- Removal of the battery pack is a tool-less process, lift the battery pack out of the vacuum gently, notice there are two wires connected to the battery.

Step 6

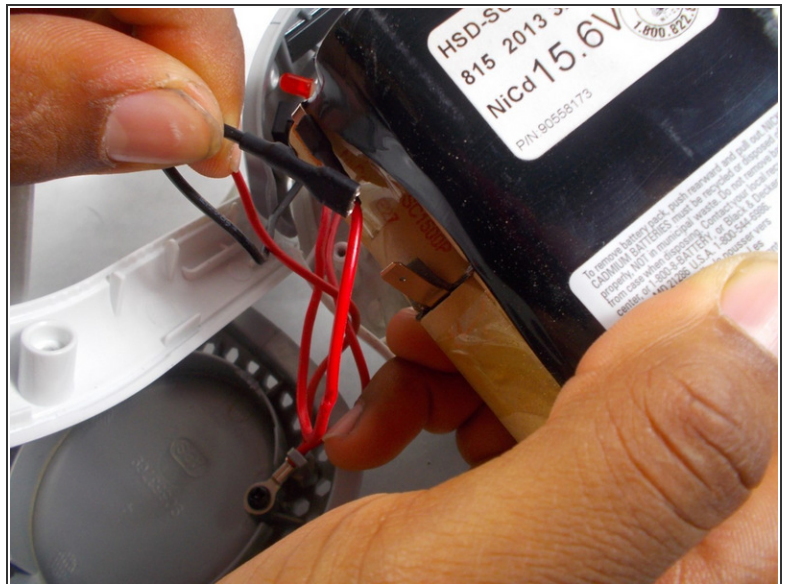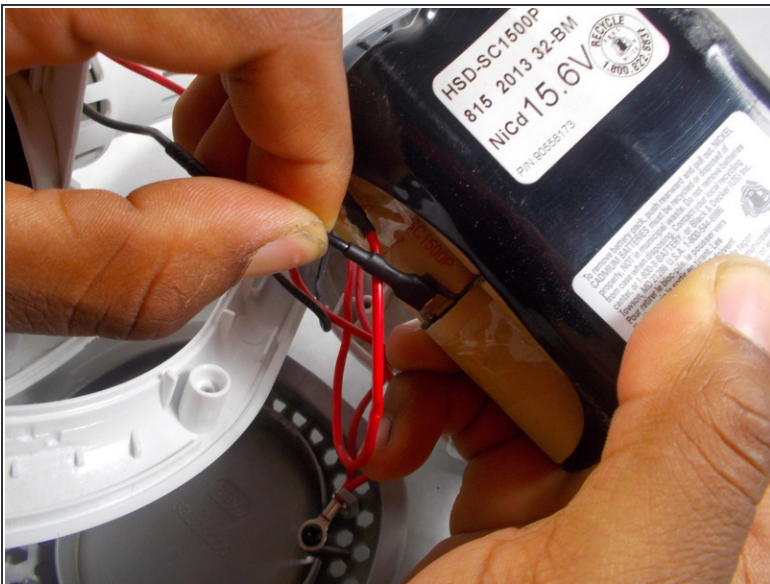

- Disconnect the red wire from the battery pack (pull do not twist!) and do the same with the black wire

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 08:18:05 PM.